

Tip for : Alfen EVE Double

We recommend the following configuration tips when you try to configure the Smartmaster Pro with Alfen EVE Double charger.

1

The serial number to be used in the smartmaster can be found in the paper documents supplied or the identification label on the underside of your charging station.

2

ACE Devices installer => static load balancing must be selected.

3

ACE Devices installer => Back office URL => SmartMaster IP (ws://X.X.X.X:8834/ocpp)

4

Check the device's IP, it's must be in the same network as the SmartMaster.

5

ACE Devices installer => connectivity=>Meter value=>meter value sample interval = 60S

6

ACE Devices installer => connectivity=>Meter value=>meter values sampled data =
Sampled data 1 = Energy.Active.Import. register
Sampled data 2 = Current.Import
Sampled data 1 = Current.Offered