

Tip for : Bisbus charger

We recommend the following configuration tips when you try to configure the Smartmaster Pro with Bisbus charger.

1

find the current IP address directly on the display of your station
Then enter the IP address in the web browser. Circontrol dashboard should now be displayed.

2

The default setting of the Bibus station may be Plug & Charge.
This must be deactivated in the Charge Point Manager.

3

Choose OCPP 1.6J under "Available Integrations"

4

The name of your BIBUS charging station must not contain spaces.

5

place host URL under Central System
(ws://{SMARTMASTER_IP_ADDR}:8834/ocpp).

6

You must set the meter values sample interval under OCPP settings (e.g. 60)