

Tip for : Powerdale Cluster charger

We recommend the following configuration tips when you try to configure the Smartmaster Pro with a Cluster from the company Powerdale.

- 1 In the "wizard", you can easily duplicate clusters
- 2 use the same "Communication unit" for all clusters connected to the same controller.
- 3 Don't forget phase rotation in the primary phase (Cluster 1 => L1, Cluster 2 =>L2,..)
- 4 If they are 16 Clusters, Connector ID = 1 for Cluster 1 to Connector ID 16 for Cluster 16.
- 5 Use the template OCPP 1.5.
- 6 Find IP address for each controller : URL
<https://IPaddress:9090/axis2/services/ChargePointService>
- 7 find the Controller number: Charge Box ID=> NexttenderCluster-XXXXX-XX-XXXX-XXXXX