

### Tip for : Etrell

We recommend the following configuration tips when you try to configure the Smartmaster Pro with a Etrell charger

1

Enabling IPv6 connectivity (if you use windows) and type : `http://<charger serial>.local/` (serial number can be found inside of Inch Duo on right panel)

---

2

Central System endpoint URL (`ws://{SMARTMASTER_IP_ADDR}:8834/ocpp`)

---

3

Allow that charge point operator is remotely setting load schedules.

---

4

Select sampled meter value types.

---